 
 


ASSEMBLY HARDWARE

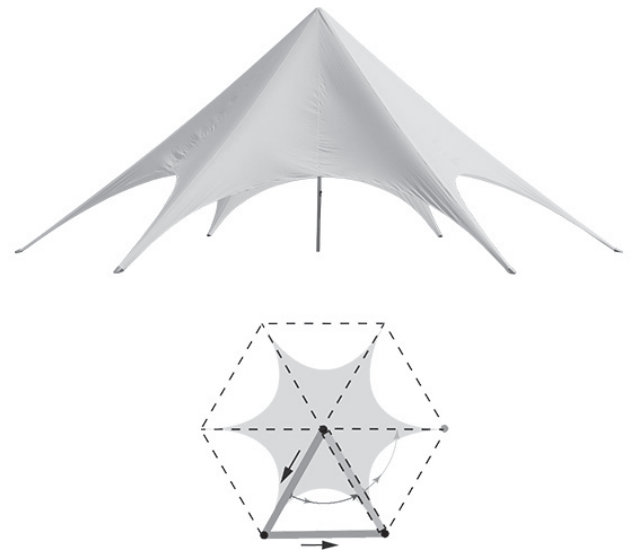

ASSEMBLY

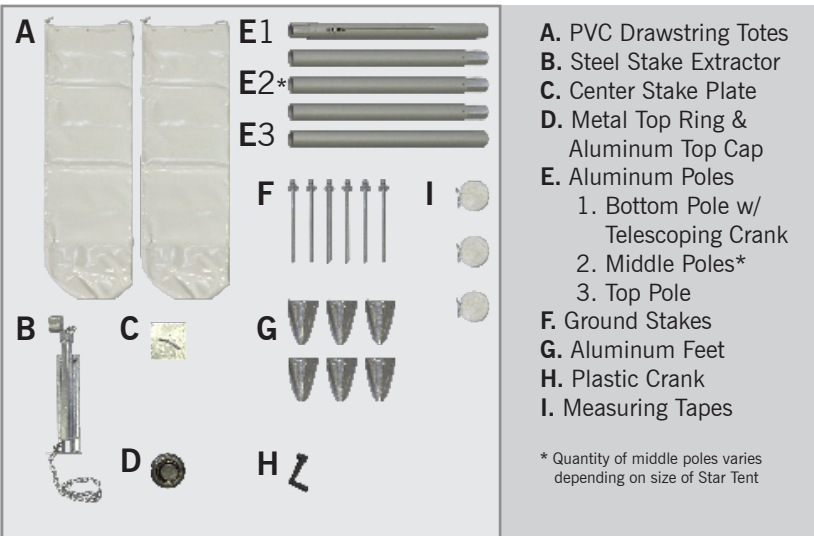

NOTE: It is recommended a minimum of 3 persons assemble the Star Tent. Ensure there is enough space to erect the tent.

1. Determine the anchor position points of the ground stakes.
 - a. Define the center point of space where the tent will be mounted. Press center stake plate spike into the ground with 2 measuring tapes attached.
 - b. From the center point, stretch one of the measuring tapes to define the distance between the center and the outer edge of the tent system.

NOTE: Insert the stakes into the ground slightly angled toward the outside.

- c. Insert one of the ground stakes into the ground to mark its position as the first anchor point.
 - d. From the position of the first anchor point (c) and the center point (a), stretch the second and third measuring tapes to form a "V" point to define the position of another anchor point. Insert a stake into the ground.
 - e. Repeat previous step to define the exact position of the remaining 4 anchor points and insert the remaining stakes into the ground.
 - f. Once all anchor points are placed into the ground, remove measuring tapes from center stake plate.
2. Completely lay out the canopy on the ground and align the feet with the ground stakes.
3. Slide the tent feet over the ground stakes until they are fully stable.

 
(Continued on Page 2)



DISCLAIMER: Star Tents should always be safely anchored into the ground. They are ideal for anchoring into soil, but can be used on pavement if cemented into concrete. Star Tents should not be used in inclement weather, including thunderstorms, heavy rains, lightning and high winds. No grill or any type of open flame is to be used under or near the star canopy. User must read and observe assembly instructions. If this is not done correctly, it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if hardware is used with any print not produced by us. Properly care for prints to keep them in great condition. Prints should never be dragged along the ground or stored without being properly folded and free from moisture. Make sure print is completely dried from any weather, and fold and store in a clean, dry place. We cannot guarantee artwork alignment across any seam. Complaints based on that will not be accepted.




ASSEMBLY CONTINUED

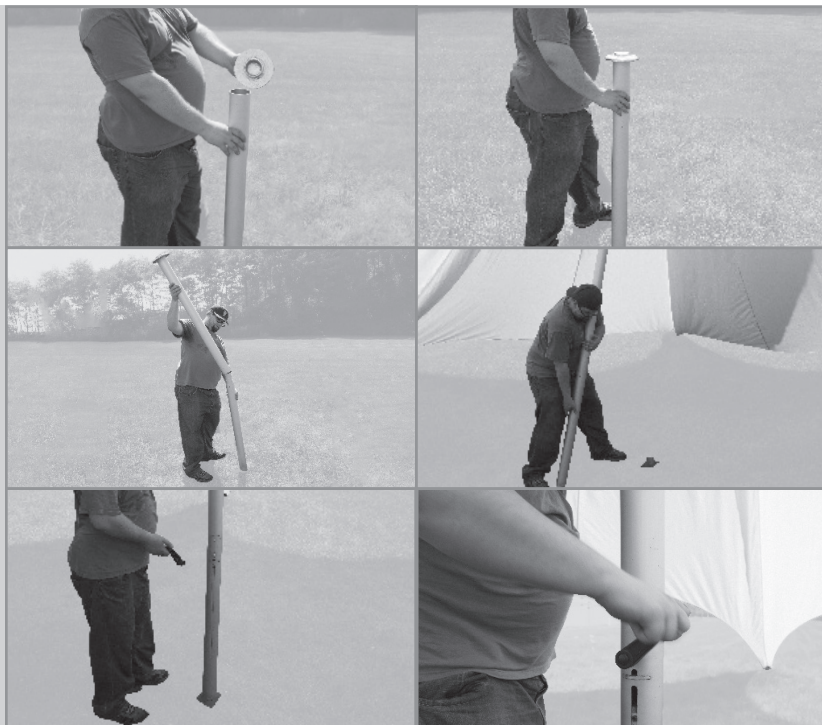

4. Attach the aluminum top cap onto the upper pole top and install the sewn-in metal ring into the center of the canopy onto the top of the pole.
5. Assemble together the remaining aluminum poles. The pole with the telescoping crank must be positioned at the bottom.
6. Mount the pole onto the base plate and attach the plastic crank onto the protruding telescoping mechanism.
7. Use the crank handle to hoist the canopy until it is completely taut.

 GROUND STAKE EXTRACTOR INSTRUCTIONS

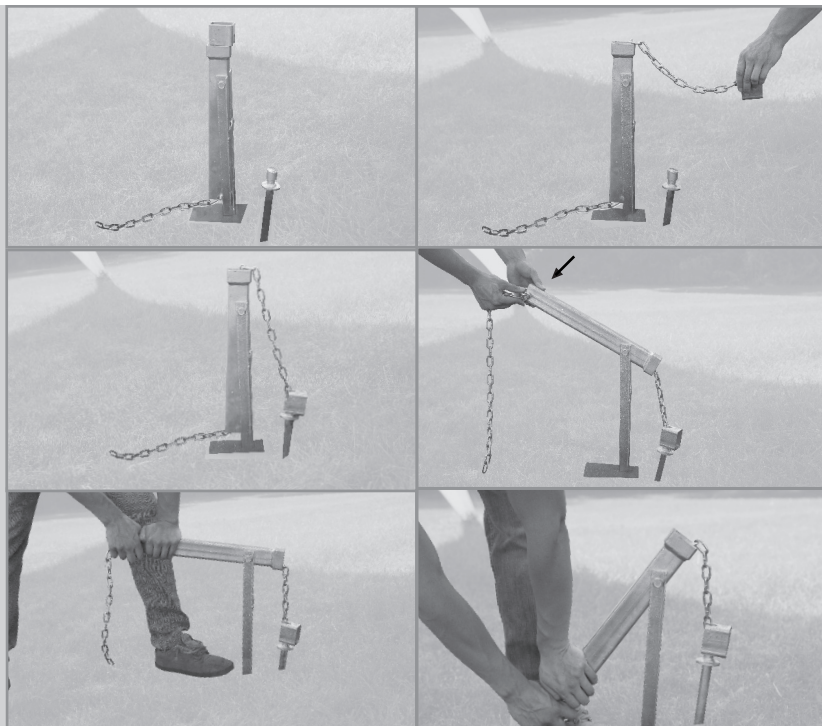

1. Place ground stake extractor next to ground stake with base facing the ground. If possible, place on flat and firm ground.
2. Pull chain on the stake extractor through the pivoting sleeve of the stake extractor.
3. Attach the bracket to the stake's head.
4. Pull the chain through the sleeve until firm and attach a chain link to the metal pin on the outside.
5. Press down the pivoting sleeve and apply tension to the chain to remove the stake out of the ground.

DISCLAIMER: Star Tents should always be safely anchored into the ground. They are ideal for anchoring into soil, but can be used on pavement if cemented into concrete. Star Tents should not be used in inclement weather, including thunderstorms, heavy rains, lightning and high winds. No grill or any type of open flame is to be used under or near the star canopy. User must read and observe assembly instructions. If this is not done correctly, it may result in damage to the unit, injury, or death, and all warranties will be void. All warranties will be void if hardware is used with any print not produced by us. Properly care for prints to keep them in great condition. Prints should never be dragged along the ground or stored without being properly folded and free from moisture. Make sure print is completely dried from any weather, and fold and store in a clean, dry place. We cannot guarantee artwork alignment across any seam. Complaints based on that will not be accepted.

