


# 4-SIDED CEILING DANGLER

Assembly Instructions | R1.091316

## ASSEMBLY HARDWARE

A.

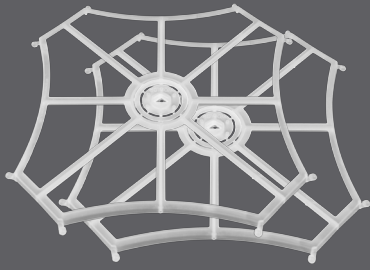

A. 2 Plastic Form Frames

B.



B. Twist-On & Cord  
(recommended for use with standard 1.0" drop ceiling grids)


C.




C. Hook & Cord  
(recommended for use with 1.0" bars, pipes or truss systems)



## ASSEMBLY & HANGING

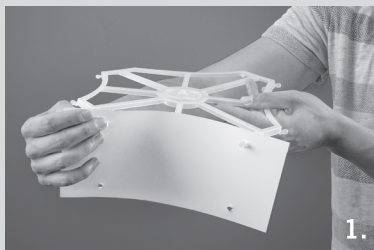

1.

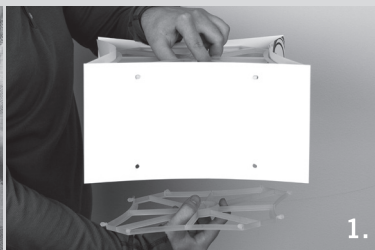

1.



2.



3.



4.



1. The top plastic form frame (A) is marked top and bottom. Ensure each piece is facing in the correct direction with the hanger holes facing outward. Attach the prints by inserting the notches on the plastic form frame through the punched holes on the prints.

2. Both the twist-on & cord (B) and hook & cord (C) have metal pins at the end. Slide the metal pin through the open hanger hole on the top plastic form frame.

**NOTE:** It is recommended 2 persons assist in hanging the display.

3. To hang the display using the twist-on, ensure the hanger has enough slack to properly attach. Place the hanger opening horizontally on the drop ceiling grid and twist clockwise to lock into place.

4. To hang the display using the hook, ensure the hanger has enough slack to properly attach. Place the hook over the bar or pipe to connect.



**DISCLAIMER:** Intended for indoor use only. Certain displays or environments may result in unsafe conditions. Display weight should not exceed 4.0lb as injury or damage may occur. Structures to which mounting is attached must be evaluated separately, as ceiling structures vary from location to location. Building manufacturer should be consulted concerning strength of ceiling support. Do not mount in direct path of heating or air conditioning ducts as injury or damage may occur. All surfaces used to attach displays should be free of dirt and contaminants and must be in superb structural conditioning. Ensure all hangers are securely attached before hanging any display.

