
ASSEMBLY HARDWARE

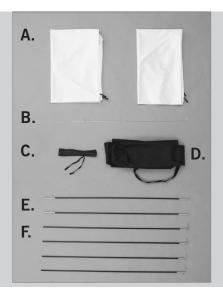


- A. Two optional prints
- **B.** 4 ground spikes for outdoor use
- **C.** 1 bag for ground spikes

snap hooks

- **D.** 1 carry/transport bag **E.** 2 center poles without
- **F.** 4 end poles with snap hooks



ASSEMBLY

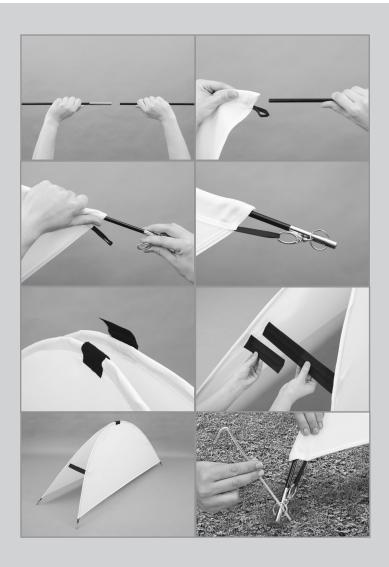

- 1. Start by removing the prints, hooks and poles from the carry bag. Place them on a clean, flat surface.
- 2. Connect one of the end poles with snap hooks to one of the center poles. Slide the connected poles through the sleeve on the upper edge of the print.
- 3. Connect another end pole to the poles from Step 2.
- 4. Repeat steps 2 and 3 on the other side of the banner.
- 5. Attach the black loops on each side of the print to the snap hooks on the end poles.
- 6. Place both prints on the long sides of the banner and connect them using the hook-and-loop bands that are located opposite each other on the top.
- 7. Close the side hook-and-loop straps.
- 8. **For outdoor use:** Slide the ground spikes into the metal ring at the end of each end pole and push them into the ground.