
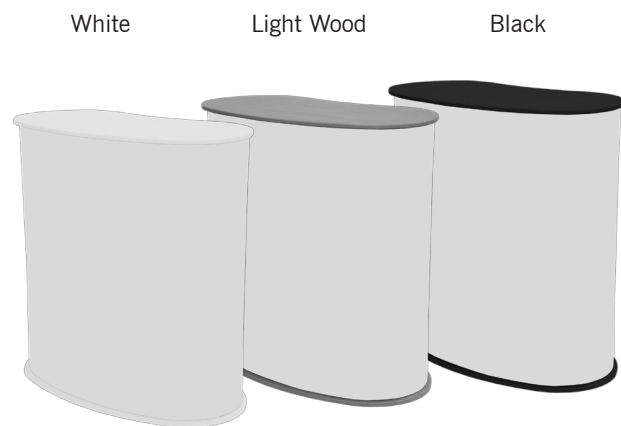


COUNTER OVAL

Assembly Instructions | R1.022317

ASSEMBLY HARDWARE

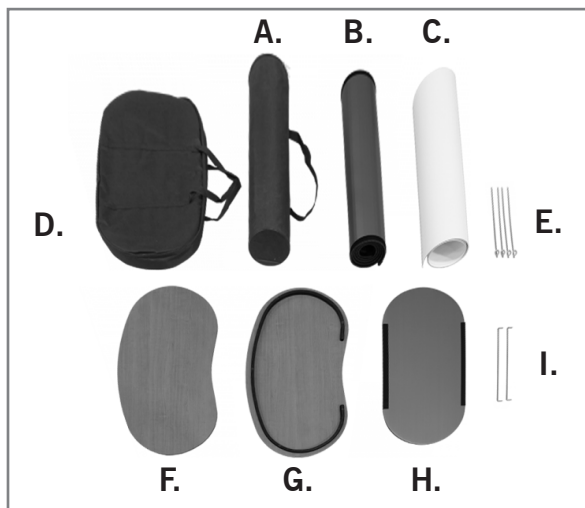

ASSEMBLY



1. Place the table bottom (G) on the ground with hook tape facing up.
2. Insert the metal rods with loop (E) into the frame's recessed channels.
3. Attach the loop tape on the PVC frame (B) to the hook tape on the table bottom (G).
4. Insert the metal rods with hook (I) into the loops to create a contact surface for the shelf.
5. Place shelf (H) onto the metal rods.
6. Position the table top (F) with hook tape facing down. Press the table top carefully downward to fasten it to the PVC frame (B).
7. Attach the print's (C) loop tape to the frame's hook tape.