


# COROPLAST A-FRAME SIGN

Assembly Instructions | R1.032321


## ASSEMBLY HARDWARE

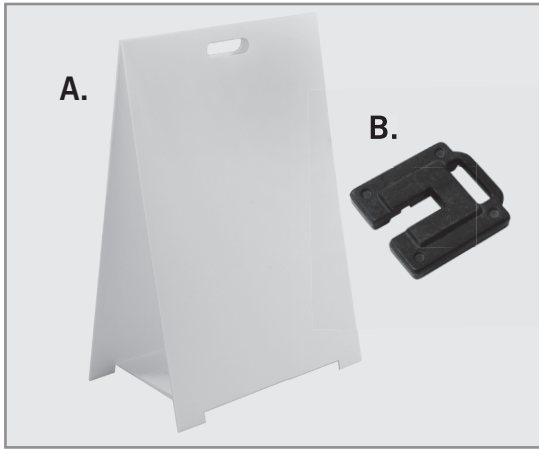

A. Coroplast A-Frame  
B. Steel Weight Plate (Optional)



## ASSEMBLY

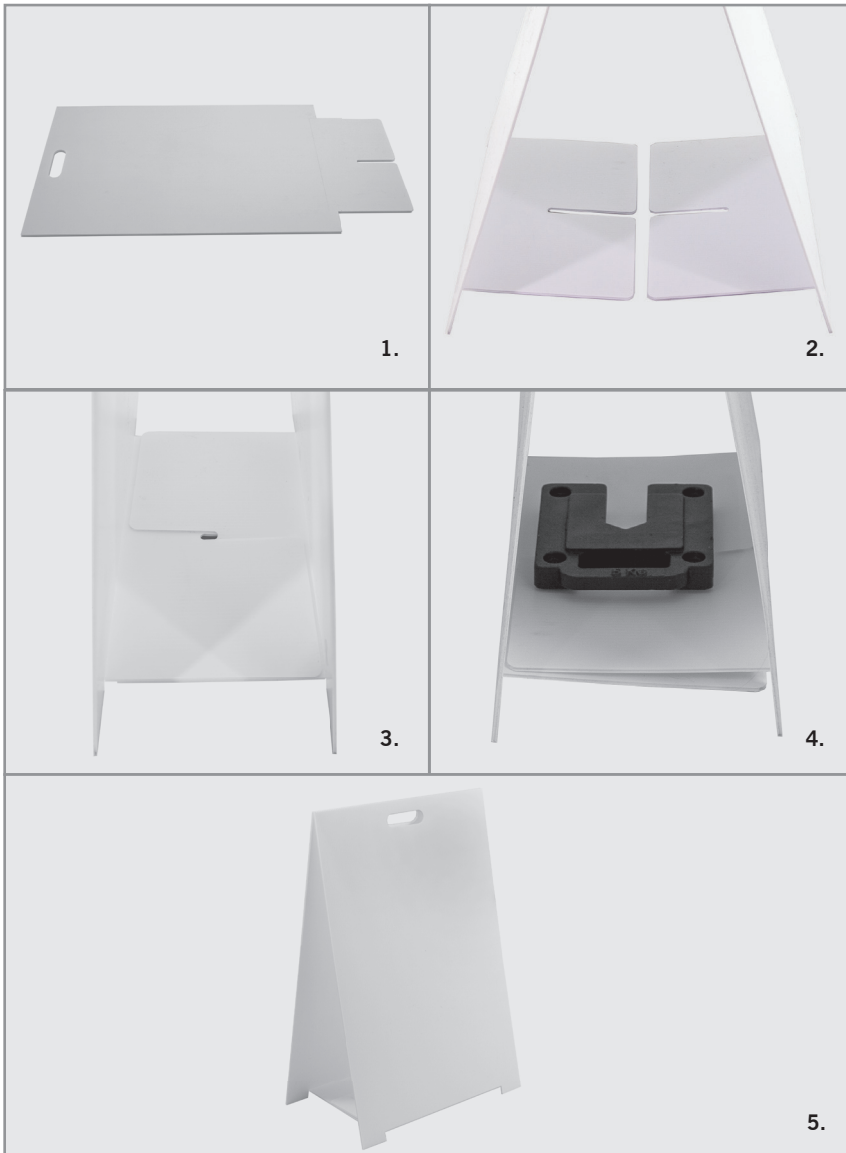

1. Lay the sign flat on a clean surface.
2. Carefully fold the tabs on the bottom towards each other.
3. Interlock the two tabs together so they are secure.
4. If placing the sign outside, we recommend using a steel weight plate for stability.
5. Your Coroplast A-Frame sign is now ready to use.